

REMINGTON®

# GOATEE GROOMER

DT-500 Use & Care Guide

Encuentre la Guía de Uso  
en español en

[www.remington-products.com](http://www.remington-products.com)



### Register Your New Product Today!

By registering your new Remington® product you will receive these important benefits:  
Proof of ownership • Product protection • Product registration • Special offer  
Register online at: [www.remington-products.com](http://www.remington-products.com)

### ¡Registre su nuevo producto hoy mismo!

Si registra su nueva Remington® podrá participar de los siguientes beneficios:  
Prueba de propiedad • Protección del producto • Registro de propiedad • Ofertas especiales  
Regístrelo en línea en: [www.remington-products.com](http://www.remington-products.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

### READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

## DANGER

To reduce the risk of electric shock:

- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.

## WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- Close supervision is necessary when this appliance is used by, on, or near children and persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.

## SAVE THESE INSTRUCTIONS

### Grooming System



### Goatee Groomer Checklist

1. Groomer Body
2. On/Off Switch
3. Large Trimmer Attachment – 31mm
4. Small Trimmer Attachment – 8mm
5. Adjustable Comb Attachment – for 31mm Trimmer

**NOTE:** The Adjustable Comb Attachment has 3 length settings (1 = Extra Close; 3 = Short). When first becoming familiar with the attachment, begin with a higher numbered setting. Adjust cutting length as desired.

### Before Using

The Goatee Groomer runs on two AAA batteries. To add the batteries, simply:

1. Open battery compartment by squeezing base of unit and removing cover.
2. Insert batteries.
3. Replace base by sliding the cover in and snapping into place.

### BATTERY CAUTIONS:

- Use of non-alkaline batteries will impair operating performance.
- Do not use recharged batteries. The lower voltage will impair the cutting unit's performance.
- Do not leave batteries in the unit if not in use for long periods of time.
- To prevent battery corrosion, keep unit in a dry environment.
- Remove dead batteries immediately and dispose of properly.

## How To Use

1. Select attachment that best fits your personal grooming needs.
2. Place attachment atop Groomer Body. Secure by carefully turning attachment in a clockwise direction (NOTE: attachment is secure when the arrow aligns with circle).
3. To remove attachment, follow Step 2 in reverse order.
4. Slide On/Off Switch upward to power the Personal Groomer.
5. The Adjustable Comb attachment is to be used with the large 31mm Trimmer. To add, align the Comb side rails with slots of Trimmer head. Secure Comb by sliding downward, away from blade head. (NOTE: a clicking noise means Comb attachment is secure and ready for use).

## Grooming Tips

### HAIR:

- Should be dry and free of lotions or other liquids.
- Comb outward to obtain maximum height / length and facing in the same direction.

### BEARD (31mm Trimmer):

- When TRIMMING, start under chin, following the jaw line back toward ear.
- When THINNING or TAPERING, use a small comb to hold beard in place. In opposite hand, hold Groomer with cutting system facing outward while slowly moving Trimmer along length of comb.

### MUSTACHE (8mm Trimmer):

- Use small comb to straighten hairs for trimming.
- Lightly touch cutting blades to mustache. Trim in multiple directions to capture all stray hairs.

## Cleaning, Care & Maintenance

**NOTE:** Always clean Grooming System attachments regularly to ensure maximum performance and a proper operating life.

### CLEANING ATTACHMENTS WITH WATER

1. Remove attachment.
2. Rinse **ONLY** the attachment under warm running water. Do NOT use hot water as this might case damage.

### CLEANING ATTACHMENTS WITH BRUSH

- After first removing attachment, thoroughly brush and blow out hair clippings from cutter system, attachment, and top of power handle.

### OILING BLADES & CAUTIONS

- Rinsing attachments under water (above) requires lubricating the cutting blades 1x monthly. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.
- Use only light-grade oils as these will not evaporate nor slow down speed of cutting blades.
- Do not use hair oil, grease, or any oil mixed with kerosene nor solvent as these too will evaporate.

### MAINTENANCE

- This appliance contains no user-serviceable parts.

## Troubleshooting

### Q: WHAT IF THE CUTTERS DON'T MOVE WHEN TURNED ON?

**A:** The cutting unit may be dirty or clogged. Clean and lubricate the groomer as described previously.

### Q: WHAT IF THE GROOMER DOESN'T WORK AT ALL WHEN TURNED ON?

**A:** Check to make certain the batteries are inserted correctly. Always use newer batteries for best performance. Should these tips prove unuseful, contact customer service at 1-800-736-4648 in the U.S. or 800-268-0425 in Canada for assistance.

## Warranty

### Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Spectrum Brands, Inc., Attention: Consumer Services, 601 Rayovac Drive, Madison, WI 53711. For more information call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Any other conditions beyond our control

*No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.*

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

**Questions or comments:** Call 800-736-4648 in the U.S. or 800-268-0425 in Canada or visit [www.remington-products.com](http://www.remington-products.com)

® Registered trademark of Spectrum Brands, Inc., or one of its subsidiaries.

©2008 SBI 03/08 Job# CS35782

Dist. By: Spectrum Brands, Inc., Madison, WI 53711  
Dist. By: Spectrum Brands, Inc., Mississauga, ON L4W 2T7

**MADE IN CHINA**

**T22-26422**