

REMINGTON®

BEARD T-STYLER

MB-900 Use & Care Guide

Encuentre la Guía de Uso en español en www.remington-products.com



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Use only when the appliance is in dry condition.
- Detach the appliance from the power supply cord before cleaning.
- Do not submerge the appliance in water.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- Your trimmer should never be left unattended when plugged in, except when charging your rechargeable trimmer.
- Close supervision is necessary when this trimmer is used by, on, or near children or persons with special needs or certain disabilities.
- Use this trimmer only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Always ensure the trimmer is switched off when cleaning or when using in water.

- Do not submerge in water. For use under running water only.
- Always store in a moisture-free environment.
- Keep the charging stand cord/electrical power adapter away from heated surfaces.
- Never operate this appliance if the trimmer or charging base/electrical power adaptor has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of this appliance is damaged the adapter must be replaced.
- Do not operate this appliance with a damaged or broken comb or cutter, or with teeth missing from the blades as injury may occur.
- Always attach the plug to appliance first, then to outlet. To disconnect, turn all controls to "off," then remove the plug from the outlet.
- The power unit is intended to be oriented in a vertical or floor-mount position.
- Never drop or insert any object into any opening.
- Do not use the trimmer if the skin is infected or broken.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not leave the trimmer in direct sunlight or in temperatures exceeding 140° F (60°C).
- For household use only.

KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

Grooming System



Grooming System Checklist

- | | |
|--|---|
| 1. Groomer Body | 8. Reversible Comb Attachment– 3/6mm (for 30mm Trimmer Blade) |
| 2. On/Off Switch | 9. Cleaning Brush |
| 3. Charging Indicator Light | 10. Oil Bottle |
| 4. T Trimmer Blade – 38mm | 11. Storage Stand |
| 5. Trimmer Blade – 30mm | 12. Electrical Power Adaptor |
| 6. Detail Trimmer Blade – 18mm | |
| 7. Reversible Comb Attachment– 9/12mm (for 30mm Trimmer Blade) | |

Before Using

Please refer to the safety instructions and warnings at the front of this manual before using this product.

Before using your Grooming System for the first time, charge the unit for 14-16 hours for optimal performance:

1. Connect the Power Adaptor cord to the Storage Stand. Plug into electrical outlet. (NOTE: adapter may be plugged directly into groomer body, bypassing the Storage Stand).
2. Place groomer body into Storage Stand. The indicator light illuminates when charging.

What To Use

Comb Attachment	Hair Length
3mm	1/8 inch
6mm	1/4 inch
9mm	3/8 inch
12mm	1/2 inch

How To Use

NOTE:

- Be sure the unit is "off" before attempting to change attachments.
- When using the appliance with the cord attached take care to ensure the cord is not twisted and is free of knots.

1. Select attachment that best fits your personal grooming needs.
2. Remove existing Trimmer Blade from Groomer by turning the attachment to loosen and detach it. Replace with your selected attachment.
3. Slide On/Off Switch upward to power the Grooming System.
4. The Reversible Comb Attachments (9/12mm and 3/6mm) are to be used along with the 30mm Trimmer Blade. To add, align the Comb side rails with slots of Trimmer head. Secure Comb by sliding downward, away from blade head.

Grooming Tips

HAIR:

- Should be dry and free of lotions or other liquids.
- Comb outward to obtain maximum height / length and facing in the same direction.

BEARD/MUSTACHE:

- Use a comb to straighten hair for trimming.
- When TRIMMING, attach 18mm Trimmer Blade. Hold Blade facing self and begin with edge of Beard line by gently lowering Trimmer Blade against skin. Use forward motions toward Beard line to trim desired locations. Follow the jaw line back toward ear.
- When THINNING or TAPERING, attach desired Comb Attachment to the 30mm Trimmer Blade. Place flat top of Comb gently against the skin. Slowly guide the Groomer through hair, repeating in various directions as necessary.

SHORT HEAD HAIR:

- Follow THINNING & TAPERING instructions referenced above.
- Attach 38mm or 30mm Trimmer Blade to draw trim lines into head hair. Lower and gently place blade on area, moving the Groomer along head. For more detailed, precise styles, use the 18mm Trimmer Blade.


SIDEBURNS:

- Use a comb to first straighten hairs for trimming.
- With 18mm Trimmer Blade facing self, start with edge of sideburn by resting blade lightly against skin.

NAPE OF NECK:

- Using a hand-held mirror is necessary if self-trimming.
- Attach the 38mm T Trimmer Blade.
- Lift hair off neck, using index finger to cover & protect those hairs NOT needing trimming.
- Carefully touch cutting blade to neck, slowly moving the groomer in an upward direction until stopped by index finger.

Cleaning, Care & Maintenance

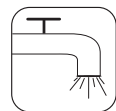

This groomer is a washable appliance, the hand-held part of which may be cleaned under water.

NOTE: Always clean Grooming System attachments regularly to ensure maximum performance and a proper operating life.

CAUTION:

- Be sure the groomer is detached from the power supply cord before cleaning.
- The groomer should not be used until it has dried.

CLEANING ATTACHMENTS WITH WATER

1. Remove attachment.
2. Rinse **ONLY** the attachment under warm running water. Do **NOT** use hot water as this might cause damage.

CLEANING ATTACHMENTS WITH BRUSH

- After first removing attachment, thoroughly brush and blow out hair clippings from cutter system, attachment, and top of power handle.

OILING BLADES & CAUTIONS

- Rinsing attachments under water (above) requires lubricating the cutting blades 1x monthly. Remove blade set by first removing the screws in head of Trimming Blades. Blade set will separate from body, allowing cleaning as necessary. Replace blade set and place 1-2 drops of Oil provided. Spread with fingertip and wipe away all excess oil.
- Use only light-grade oils (e.g. sewing machine oil) as these will not evaporate nor slow down speed of cutting blades.
- Do not use hair oil, grease, or any oil mixed with kerosene or solvent as these too will evaporate.

STORAGE

- Always store this appliance and cord in a moisture-free area. Do not store in temperatures exceeding 140°F (60°C).
- Do not wrap the cord of the charging adaptor around the appliance.

MAINTENANCE

- This groomer contains no user-serviceable parts.

Troubleshooting

Q: WHAT IF THE CUTTERS DON'T MOVE WHEN TURNED ON?

A: The cutting unit may be dirty or clogged. Clean and lubricate the groomer as described previously.

Q: WHAT IF THE GROOMER DOESN'T WORK AT ALL WHEN TURNED ON?

A: The groomer might simply need charging. Follow instructions for charging as described previously. Should charging prove unsuccessful, contact customer service at 1-800-736-4648 in the U.S. or 800-268-0425 in Canada for assistance.

Q: WHAT IF THE GROOMER FAILS TO HOLD A CHARGE?

A: Fully discharge the groomer by running until completely stopping. Next, follow recharging instructions described previously. If time between recharging cycles fails to increase, the battery might require replacement. Contact customer service at 1-800-736-4648 in the U.S. or 800-268-0425 in Canada for assistance.

Battery Removal

NOTE: Always recycle or properly dispose of batteries according to Local and State requirements.

1. Unplug groomer from outlet to avoid risk of electrical shock.
2. Remove rear groomer cover by first prying the rubber panel from the product with a flat head screwdriver.
3. Next, pry the back panel from the product with a flat head screwdriver. This will expose the batteries.
4. With wire cutters, clip the wires leading to the batteries.
5. Remove the batteries from the product. Contact your local authorities for proper disposal.



CAUTION: THESE NICKEL-CADMIUM BATTERIES MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE WITH STATE AND LOCAL REGULATIONS.

Do not burn or mutilate, as they may burst or release toxic materials. Do not short-circuit, as this may cause burns.

The EPA-certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates Spectrum Brands, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when

taken out of service in the United States or Canada. the RBRC® program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERYSM for information on Ni-Cd battery recycling and disposal bans/restriction in your area. Spectrum Brands, Inc. involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

Performance Guarantee

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Spectrum Brands, Inc., Attention: Consumer Services, 601 Rayovac Drive, Madison, WI 53711. For more information call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

120 VAC 60 Hz

Questions or comments: Call 800-736-4648 in U.S. or 800-268-0425 in Canada or visit www.remington-products.com

REMINGTON is a Registered Trademark of Spectrum Brands, Inc., or one of its subsidiaries.

©2008 SBI 05/08 Job# CS35876

Dist By: Spectrum Brands, Inc., Madison, WI 53711

Dist By: Spectrum Brands Canada, Inc., Mississauga, ON L5L 0A1

MADE IN CHINA

T22-26518

